


INSTALLATION AND USERMANUAL

for your heat pump

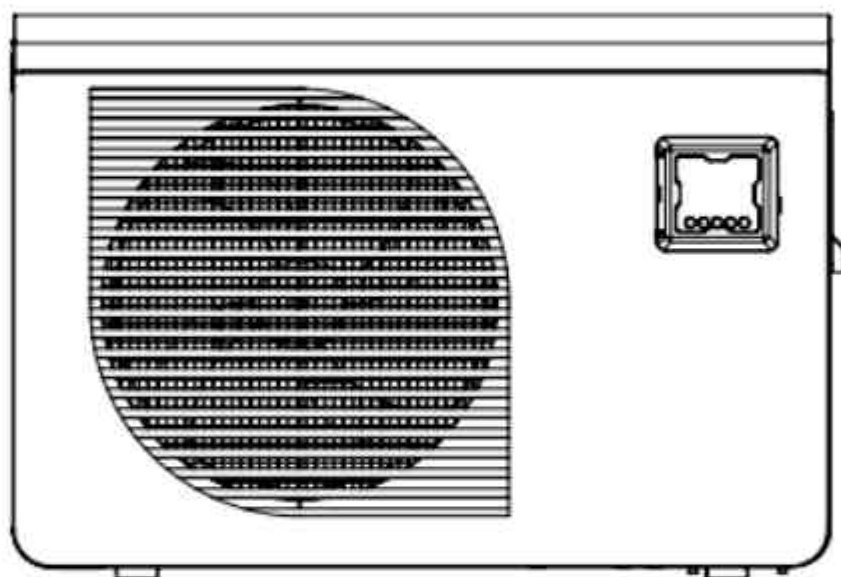

Pool Inverter 70/90/120/150/200



This heat pump contains a flammable refrigerant R290.

Any intervention on the refrigerant circuit is prohibited without a valid authorization.

Before working on the refrigerant circuit, the following precautions are necessary for safe work.

1. Work procedure

The work must be carried out according to a controlled procedure, in order to minimize the risk of presence of flammable gases or vapors during the execution of the works.

2. General work area

All persons in the area must be informed of the nature of the work in progress. Avoid working in a confined area. The area around the work area should be divided, secured and special attention should be paid to nearby sources of flame or heat.

3. Verification of the presence of refrigerant

The area should be checked with a suitable refrigerant detector before and during work to ensure that there is no potentially flammable gas. Make sure that the leak detection equipment used is suitable for flammable refrigerants, is it does not produce sparks, is properly sealed or has internal safety.

4. Presence of fire extinguisher

If hot work is to be performed on the refrigeration equipment or any associated part, appropriate fire extinguishing equipment must be available. Install a dry powder or CO₂ fire extinguisher near the work area.

5. No source of flame, heat or spark

It is totally forbidden to use a source of heat, flame or spark in the direct vicinity of one or more parts or pipes containing or having contained a flammable refrigerant. All sources of ignition, including smoking, must be sufficiently far from the place of installation, repair, removal and disposal, during which time a flammable refrigerant may be released into the surrounding area. Before starting work, the environment of the equipment should be checked to ensure that there is no risk of flammability. «No smoking» signs must be posted.

6. Ventilated area

Make sure the area is in the open air or is properly ventilated before working on the system or performing hot work. Some ventilation must be maintained during the duration of the work.

7. Controls of refrigeration equipment

When electrical components are replaced, they must be suitable for the intended purpose and the appropriate specifications. Only the parts of the manufacturer can be used. If in doubt, consult the technical service of the manufacturer.

The following controls should be applied to installations using flammable refrigerants:

- a. The size of the load is in accordance with the size of the room in which the rooms containing the refrigerant are installed;
- b. Ventilation and air vents work properly and are not obstructed;
- c. If an indirect refrigeration circuit is used, the secondary circuit must also be checked.
- d. The marking on the equipment remains visible and legible. Illegible marks and signs must be corrected;
- e. Refrigeration pipes or components are installed in a position where they are unlikely to be exposed to a substance that could corrode components containing refrigerant

8. Verification of electrical appliances

Repair and maintenance of electrical components must include initial safety checks and component inspection procedures. If there is a defect that could compromise safety, no power supply should be connected to the circuit until the problem is resolved.

Initial security checks must include:

- a. That the capacitors are discharged: this must be done in a safe way to avoid the possibility of sparks;
- b. No electrical components or wiring are exposed during loading, recovery or purging of the refrigerant gas system;
- c. There is continuity of grounding.

Contents

1.General	5
1.1 General Terms of Delivery	5
1.2 Safety Instruction	5
1.3 Water treatment	6
2.Description	7
2.1 Package contents	7
2.2 Technical Specification	8
2.3 Unit dimension	9
2.4 Exploding view	10
3.Installation	11
3.1 Pre-requirements	11
3.2 Location	11
3.3 Installation layout	12
3.4 Connecting the condensation draining kit	12
3.5 Installing the unit on noise-damping supports	12
3.6 Hydraulic connection	13
3.7 Electrical installation	15
3.8 Electrical connection	16
3.9 Wall-mounting the remote control	17
4.Use	18
4.1 Wired remote control	18
4.2 Operating mode selector	18
4.3 Heating Mode (Inverter)	19
4.4 Fix Mode (heating only)	20
4.5 ECO Silence Mode	21
4.6 Cooling Mode (Inverter)	22
4.7 Setting the clock	23
4.8 Programming start/stop	24
4.9 Activating a programme	25
4.10 Deactivating a programme	25
4.11 Status values	26
4.12 System parameter query	27
4.13 Forced de-icing function	27
4.14 Parameter table	28
5.Operation	30
5.1 Operation	30
5.2 Servo-control of circulating pump	31
5.3 Using the pressure gauge	31
5.4 Antifreeze protection	32
6.Maintenance and servicing	33
6.1 Maintenance and servicing	33
6.2 Winter storage	33
7.Repairs	33
7.1 Breakdowns and faults	34
7.2 List of faults	34
8.Wiring diagram	37

**These installation instructions are an integral part of the product.
They must be given to the installer and retained by the user.
If the manual is lost, please consult the website:**

The instructions and recommendations contained in this manual should be read carefully and understood since they provide valuable information concerning the heat pump's safe handling and operation. **Keep this manual in an accessible place for easy future reference.**

Installation must be carried out by a qualified professional person in accordance with current regulations and the manufacturer's instructions. An installation error may cause physical injury to persons or animals as well as mechanical damage for which the manufacturer can under no circumstances be held responsible.

After unpacking the heat pump, please check the contents in order to report any damage. Please also check that the pressure indicated on the gauge is higher than 80 psi. If not, this could mean a leak of refrigerant.

Prior to connecting the heat pump, ensure that the information provided in this manual is compatible with the actual installation conditions and does not exceed the maximum limits authorised for this particular product.

In the event of a defect and/or malfunction of the heat pump, the electricity supply must be disconnected and no attempt made to repair the fault.

Repairs must be undertaken only by an authorised technical service organization using original replacement parts. Failure to comply with the above-mentioned clauses may have an adverse effect on the heat pump's safe operation.

To guarantee the heat pump's efficiency and satisfactory operation, it is important to ensure its regular maintenance in accordance with the instructions provided.

If the heat pump is sold or transferred, always make sure that all technical documentation is transmitted with the equipment to the new owner.

This heat pump is designed solely for heating a swimming pool. Any other use must be considered as being inappropriate, incorrect or even hazardous.

Any contractual or non-contractual liability of the manufacturer/distributor shall be deemed null and void for damage caused by installation or operational errors, or due to non-compliance with the instructions provided in this manual or with current installation norms applicable to the equipment covered by this document.

1. General

1.1 General Terms of Delivery

All equipment, even if shipped 'free of carriage and packing', is dispatched at the consignee's own risk

The person responsible for receiving the equipment must carry out a visual inspection to identify any damage to the heat pump during transport (refrigerant system, body panels, electrical control box, frame). He/ she must note down on the carrier's delivery note any remarks concerning damage caused during transport and confirm them to the carrier by registered letter within 48 hours.

The equipment must always be stored and transported vertically on a pallet and in its original packaging. If it is stored or transported horizontally, wait at least 24 hours before switching it on.



1.2 Safety Instruction



WARNING: Please read carefully the safety instructions before using the equipment. The following instructions are essential for safety so please strictly comply with them.

During installation and servicing

Only a qualified person may undertake installation, start-up, servicing and repairs, in compliance with current standards.

Before operating or undertaking any work on the equipment (installation, commissioning, usage, servicing), the person responsible must be aware of all the instructions in the heat pump's installation manual as well as the technical specifications.

Under no circumstances install the equipment close to a source of heat, combustible materials or a building's air intake.

If installation is not in a location with restricted access, a heat pump protective grille must be fitted.

To avoid severe burns, do not walk on pipework during installation, repairs or maintenance.

To avoid severe burns, prior to any work on the refrigerant system, turn off the heat pump and wait several minutes before placing temperature and pressure sensors. Check the refrigerant level when servicing the heat pump.

Check that the high and low pressure switches are correctly connected to the refrigerant system and that they turn off the electrical circuit if tripped during the equipment's annual leakage inspection.

Check that there is no trace of corrosion or oil stains around the refrigerant components.

During use

To avoid serious injuries, never touch the fan when it is operating.

Keep the heat pump out of the reach of children to avoid serious injuries caused by the heat exchanger's blades.

Never start the equipment if there is no water in the pool or if the circulating pump is stopped.

Check the water flow rate every month and clean the filter if necessary.

During cleaning

Switch off the equipment's electricity supply.

Close the water inlet and outlet valves.

Do not insert anything into the air or water intakes or outlets. Do not rinse the equipment with water.

During repairs

Carry out work on the refrigerant system in accordance with current safety regulations.

Brazing should be performed by a qualified welder.

When replacing a defective refrigerant component, use only parts certified by our technical department.

When replacing pipework, only copper pipes conforming to Standard NF EN12735-1 may be used for repairs.

When pressure-testing to detect leaks:

To avoid the risks of fire or explosion, never use oxygen or dry air. Use dehydrated nitrogen or a mixture of nitrogen and refrigerant. The low and high side test pressure must not exceed 42 bar.

1.3 Water treatment

Heat pumps for swimming pools can be used with all types of water treatment systems.

Nevertheless, it is essential that the treatment system (chlorine, pH, bromine and/or salt chlorinator metering pumps) is installed after the heat pump in the hydraulic circuit.

To avoid any deterioration to the heat pump, the water's pH must be maintained between 6.9 and 8.0.

2. Description

2.1 Package contents

- ✓ Heat pump
- ✓ 2 hydraulic inlet/outlet connectors (38mm diameter)
- ✓ This installation and user manual
- ✓ Condensation draining kit
- ✓ 4 anti-vibration pads (fastenings not supplied)

2.2 General characteristics


A heat pump has the following features:

- ✓ CE certification and complies with the RoHS European directive.
 - ✓ High performance with up to 80% energy savings compared to a conventional heating system.
 - ✓ Clean, efficient and environmentally friendly R290 refrigerant.
 - ✓ Reliable high output leading brand compressor.
 - ✓ Wide hydrophilic aluminium evaporator for use at low temperatures. User-friendly intuitive remote control.
 - ✓ Heavy duty ABS shell, anti-UV treated and easy to maintain. Designed to be silent.
 - ✓ Dual antifreeze system to avoid frost damage.
- Revolutionary exchanger with patented antifreeze system.
- A smart monitoring system to preserve the pipework and liner without emptying the pool in winter.

2.3 Technical Specification


		Pool Inverter 70	Pool Inverter 90	Pool Inverter 120	Pool Inverter 150	Pool Inverter 200
Advised pool volume	m ³	20~35	25~40	35~50	50~70	70~80
Heating temperature range	°C	15~40	15~40	15~40	15~40	15~40
Cooling temperature range	°C	8~28	8~28	8~28	8~28	8~28
Operating range	°C	-10~43	-10~43	-10~43	-10~43	-10~43
Air 26°C Water 26°C Inverter mode	Capacity(kW)	7.30~3.05	9.50~3.81	12.00~5.20	16.20~6.58	20.10~8.52
	Power input(kW)	1.23~0.21	1.48~0.27	2.02~0.37	2.68~0.47	3.33~0.63
	COP	14.25~5.95	14.11~6.50	14.05~5.95	14.00~6.05	13.52~6.04
Air 15°C Water 26°C Inverter mode	Capacity(kW)	4.90~2.18	6.60~2.83	8.80~3.88	12.60~5.88	15.60~6.80
	Power input(kW)	0.99~0.28	1.35~0.37	1.78~0.49	2.53~0.76	3.17~0.87
	COP	7.79~4.95	7.65~4.90	7.88~4.95	7.74~4.98	7.82~4.92
Air 35°C Water 27°C	Capacity(kW)	3.54~2.17	3.95~2.38	5.50~2.80	6.80~4.20	9.70~5.40
	Power input(kW)	1.00~0.43	1.12~0.48	1.55~0.58	1.94~0.88	2.75~1.09
	EER	5.05~3.54	4.96~3.53	5.00~3.55	4.90~3.51	4.95~3.53
Power supply		220-240V~ /50Hz	220-240V~ /50Hz	220-240V~ /50Hz	220-240V~ /50Hz	220-240V~ /50Hz
Max power input	kW	2.2	2.2	2.8	3.5	4.5
Max Current	A	9.76	9.76	12.42	15.63	19.96
Water flow	m ³ /h	3.20	3.81	5.25	6.71	8.77
Refrigerant volume		R290	R290	R290	R290	R290
Min pressure/max pressure		0.03/3.2MPa	0.03/3.2MPa	0.03/3.2MPa	0.03/3.2MPa	0.03/3.2MPa
Unit net dimensions	mm	880x320x805	880x320x805	930x340x850	930x340x850	930x340x850
Package dimensions	mm	930x380x740	930x380x740	980x400x785	980x400x785	980x400x785
Net weight	kg	38	39	48	57	61
Gross weight	kg	48	47	56	65	69
Noise at 1 m	dB(A)	48	51	54	54	56
Evaporator type		Copper finned	Copper finned	Copper finned	Copper finned	Copper finned
Water proof level		IPX4	IPX4	IPX4	IPX4	IPX4
Loss charge	(mCE)	1.1	1.1	1.1	1.1	1.1

2.4 Unit dimension

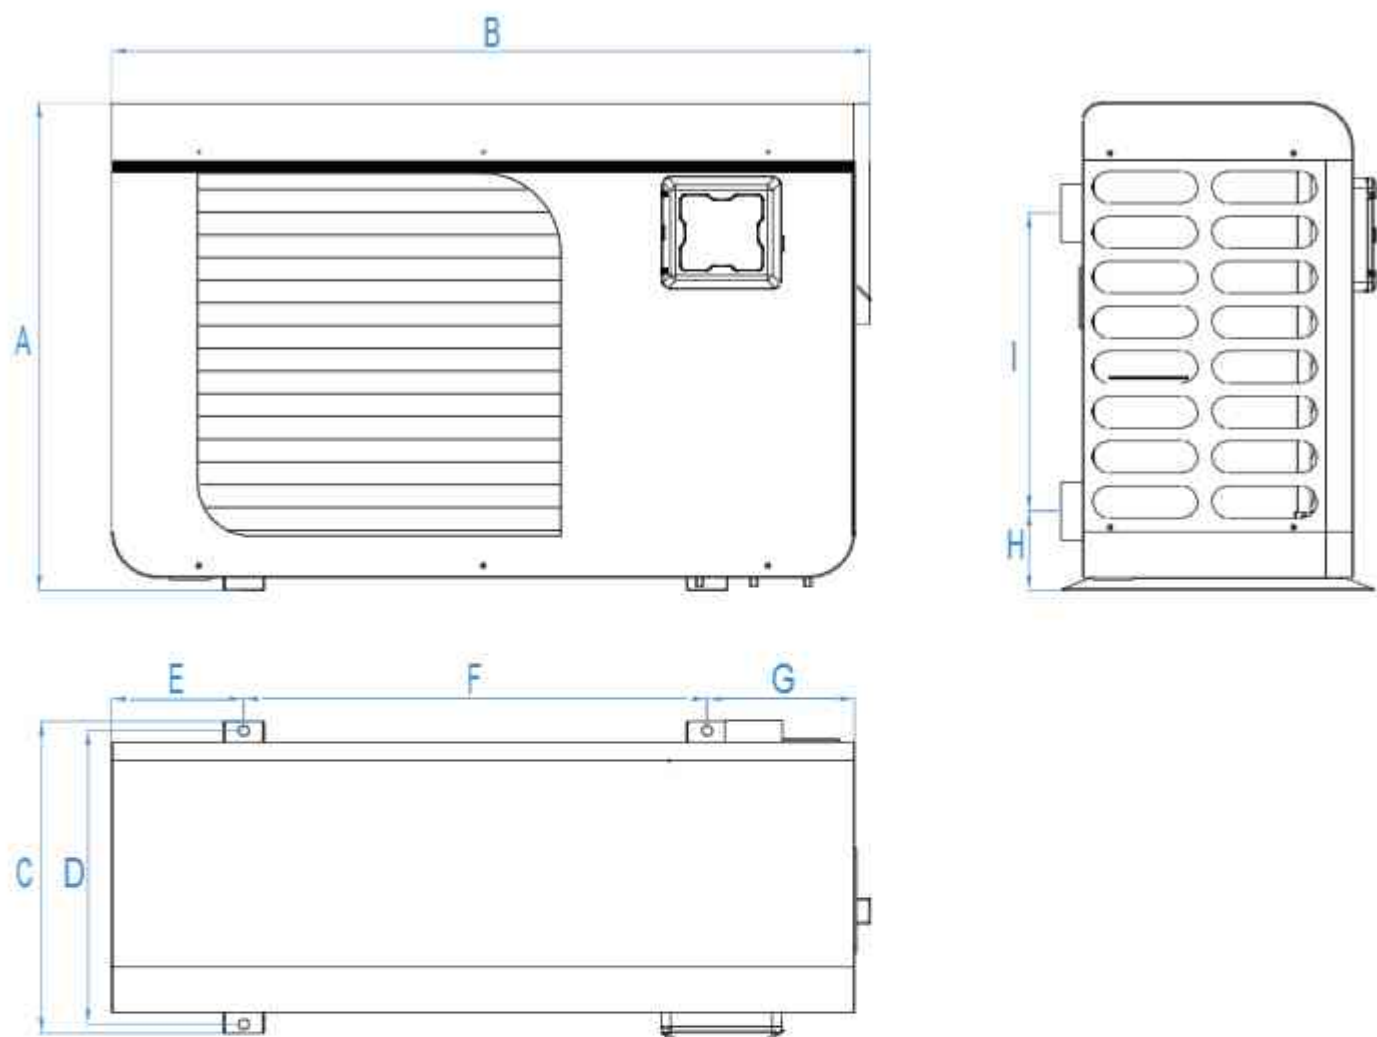

	Pool Inverter 70	Pool Inverter 90	Pool Inverter 120	Pool Inverter 150	Pool Inverter 200
A	610	610	650	650	650
B	880	880	930	930	930
C	350	350	360	360	360
D	330	330	340	340	340
E	134	134	145	145	145
F	635	635	602	602	602
G	111	111	180	180	180
H	86	86	91	91	91
I	330	330	330	330	395

2.5 Exploding view

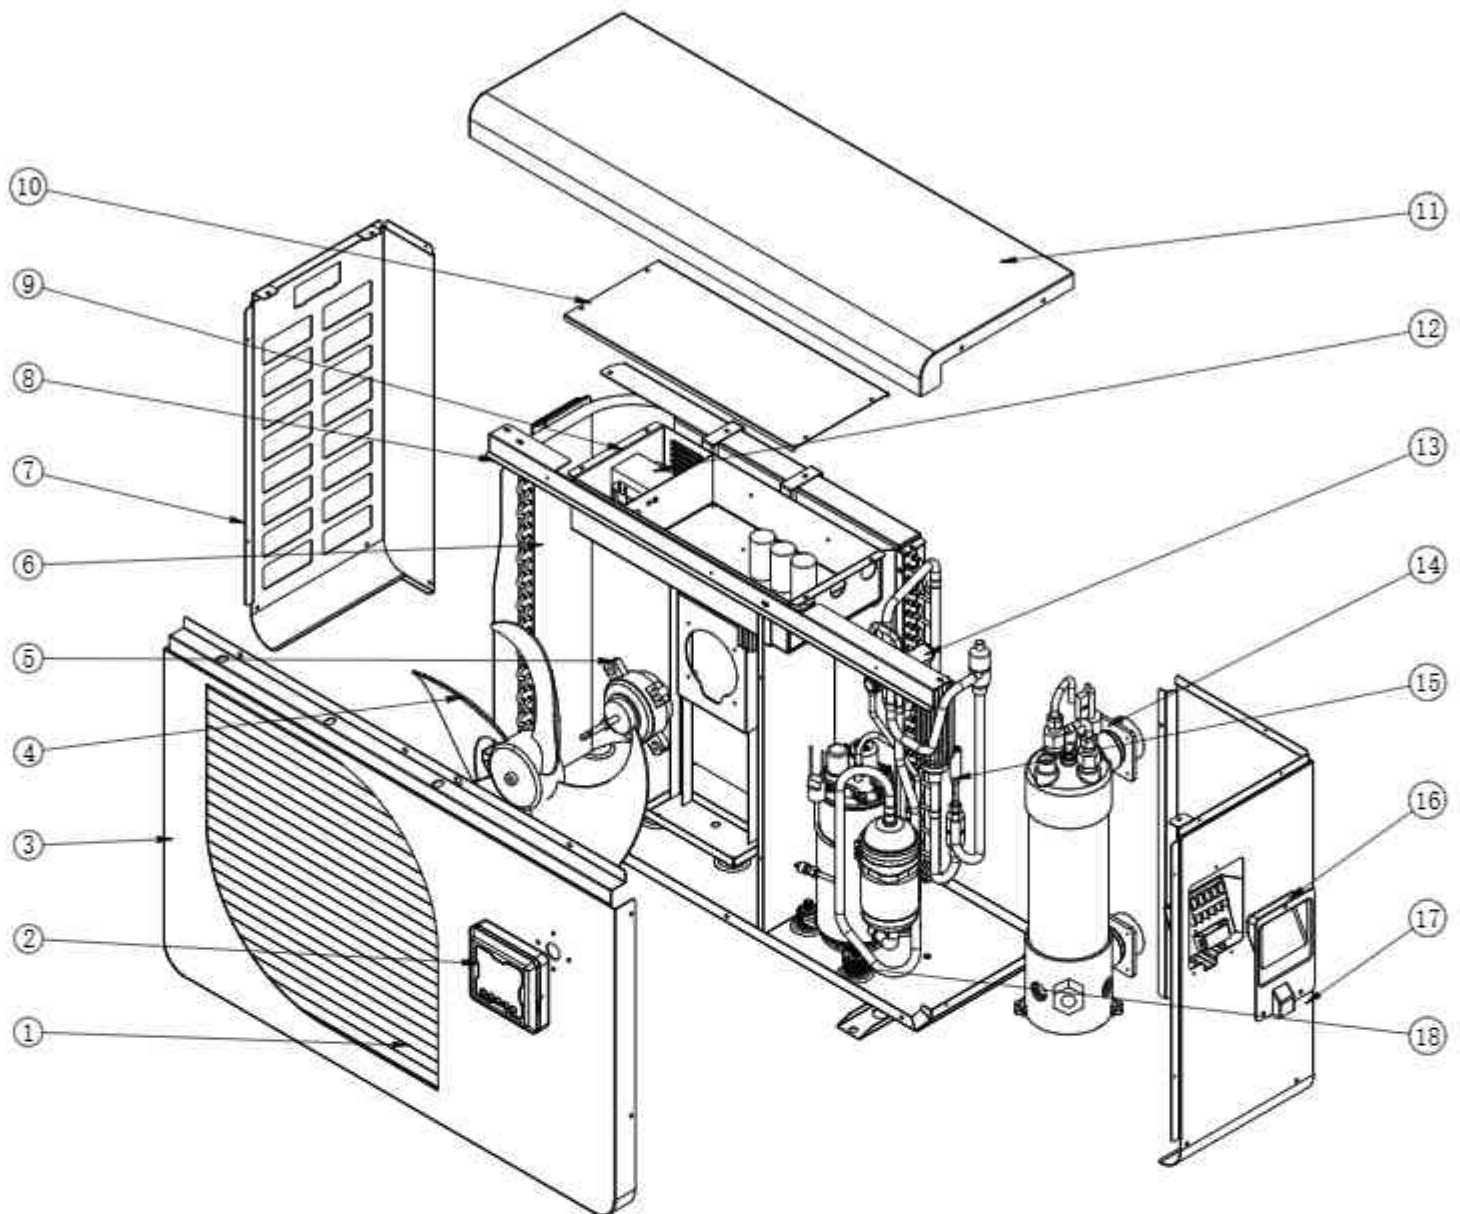

1	Plastic front panel	11	Top panel
2	Guard net	12	Electric transformer
3	Front panel	13	4-way valve
4	Fan blade	14	Heat exchanger
5	Fan motor	15	Electronic expansive valve
6	Evaporator	16	Right hand grip
7	Left side panel	17	Right side panel
8	Assembly frame	18	Compressor
9	Electrical control box		
10	Electrical control box cover		

3. Installation



WARNING: Installation must be carried out by a qualified engineer.

This section is provided for information purposes only and must be checked and adapted if necessary according to the actual installation conditions.

3.1 Pre-requirements

Equipment necessary for the installation of your heat pump:

Power supply cable suitable for the unit's power requirements.

A By-Pass kit and an assembly of PVC tubing suitable for your installation as well as stripper, PVC adhesive and sandpaper.

A set of wall plugs and expansion screws suitable to attach the unit to your support.


We recommend that you connect the unit to your installation by means of flexible PVC pipes in order to reduce the transmission of vibrations.

Suitable fastening studs may be used to raise the unit.

3.2 Location

Please comply with the following rules concerning the choice of heat pump location.


- The unit's future location must be easily accessible for convenient operation and maintenance.
- It must be installed on the ground, fixed ideally on a level concrete floor. Ensure that the floor is sufficiently stable and can support the weight of the unit.
- A water drainage device must be provided close to the unit in order to protect the area where it is installed.
- If necessary, the unit may be raised by using suitable mounting pads designed to support its weight.
- Check that the unit is properly ventilated, that the air outlet is not facing the windows of neighbouring buildings and that the exhaust air cannot return. In addition, provide sufficient space around the unit for servicing and maintenance operations.
- The unit must not be installed in an area exposed to oil, flammable gases, corrosive products, sulphureous compounds or close to high frequency equipment.
- To prevent mud splashes, do not install the unit near a road or track.
- To avoid causing nuisance to neighbours, make sure the unit is installed so that it is positioned towards the area that is least sensitive to noise.
- Keep the unit as much as possible out of the reach of children.

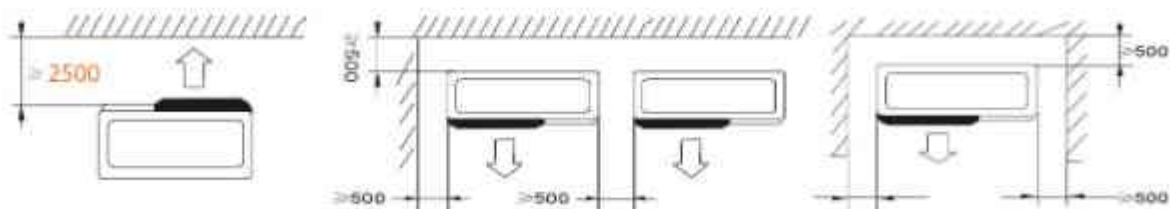

Place nothing less than one metre in front of the heat pump.
Leave 50 cm of empty space around the sides and rear of the heat pump.

Do not leave any obstacle above or in front of the unit!

3.3 Installation layout

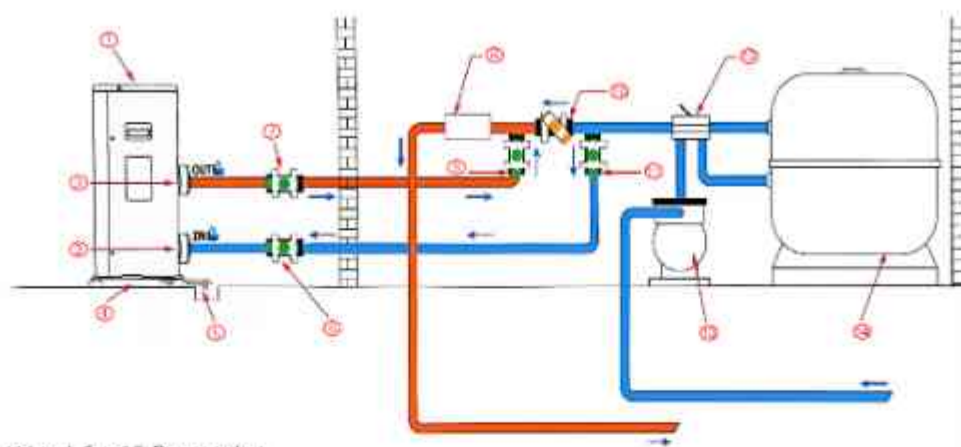

Valves 1, 2 and 3: Bypass valves
 Valves 4 and 5: Regulating valves
 (Recommended for facilitating adjustments close to the machine)

1	Heat pump	6	Condensation draining	9	Valve 3	13	Circulation pump
2	Water outlet	7	Valve 4	10	Valve 1	14	Filtration
3	Water intake	8	Valve 5	11	Valve 2		
4	Elevating shaft	9	Automated treatment system	12	4-way valve		

3.4 Connecting the condensation draining kit

While operating, the heat pump is subject to condensation. This will result in a more or less large run-off of water, depending on the degree of humidity. To channel this flow, we recommend that you install the condensation drainage kit.

How do you install the condensation drainage kit?

Install the heat pump, raising it at least 10 cm with solid water-resistant pads, then connect the drainage pipe to the opening located under the pump.

3.5 Installing the unit on noise-damping supports

In order to minimize the noise pollution associated with heat pump vibrations, it can be positioned on vibration absorbing pads.

To do this, you simply have to position a pad between each of the unit's feet and its support, and then fix the heat pump to the support with suitable screws.



WARNING: Installation must be carried out by a qualified engineer.


This section is provided for information purposes only and must be checked and adapted if necessary according to the actual installation conditions.

3.6 Hydraulic connection

By-Pass assembly

The heat pump must be connected to the pool by means of a By-Pass assembly.

A By-Pass is an assembly consisting of 3 valves that regulate the flow circulating in the heat pump. During maintenance operations, the By-Pass permits the heat pump to be isolated from the system without interrupting your installation.

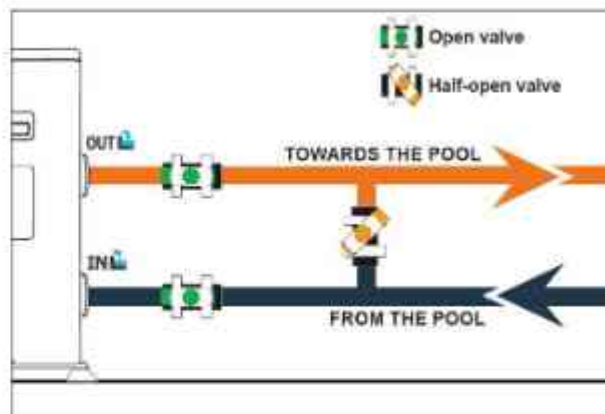


Making a hydraulic connection with the By-Pass kit



WARNING: Do not run water through the hydraulic circuit for 2 hours after applying the adhesive.

Step 1: Take the necessary steps to cut your pipes.

Step 2: Make a straight perpendicular cut through the PVC pipes with a saw.

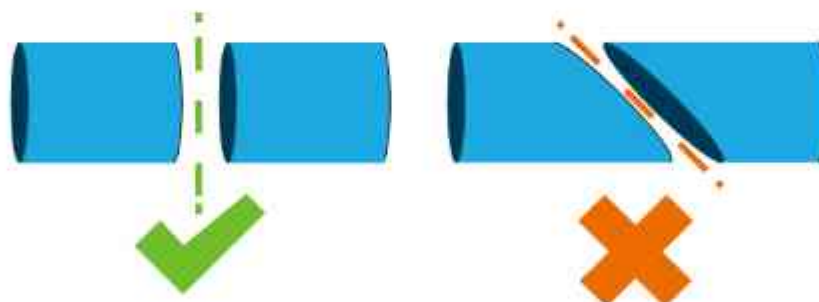

Step 3: Assemble your hydraulic circuit without connecting it in order to check that it perfectly fits your installation, then dismantle the pipes to be connected.

Step 4: Chamfer the ends of the cut pipes with sandpaper.

Step 5: Apply stripper to the ends of the pipes to be connected.


Step 6: Apply the adhesive in the same place.

Step 7: Assemble the pipes.


Step 8: Clean off any adhesive remaining on the PVC.

Step 9: Leave to dry for at least 2 hours before putting the hydraulic circuit into water.

By-Pass assembly for one heat pump

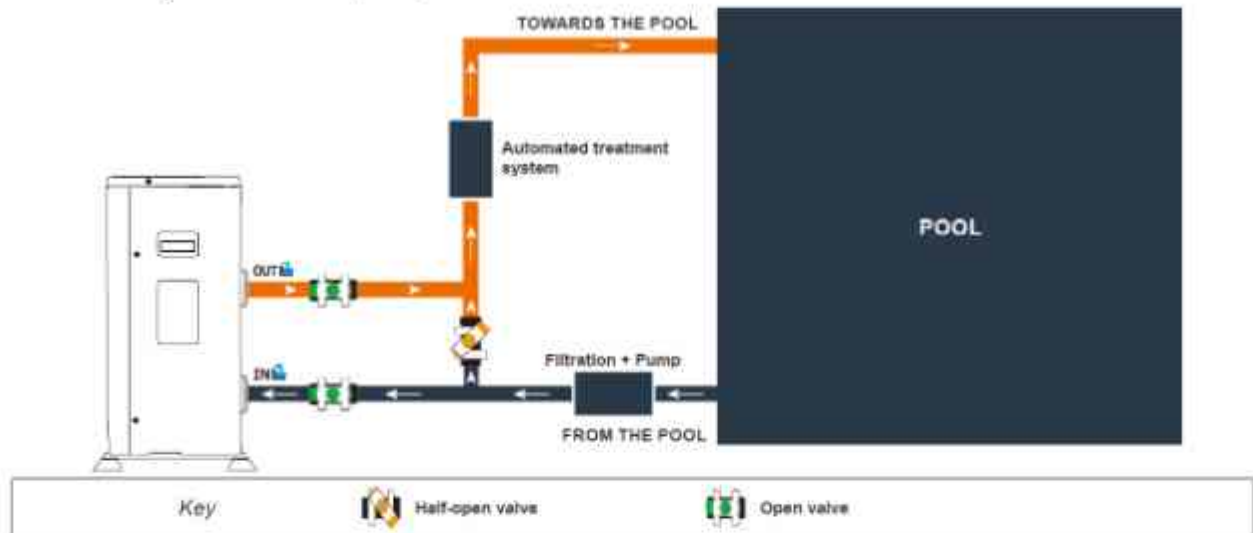

By-Pass assembly for more than one heat pump

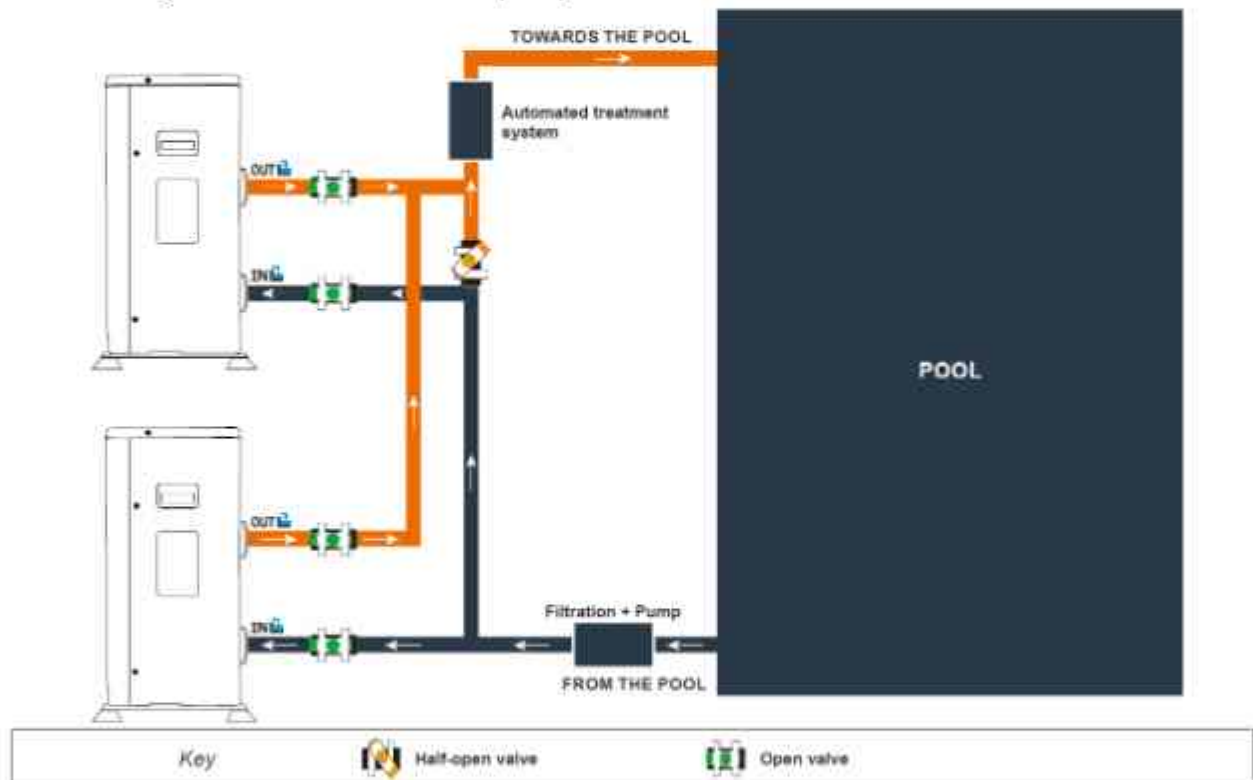

The filter located upstream of the heat pump must be regularly cleared so that the water in the system is clean, thus avoiding the operational problems associated with dirt or clog- ging in the filter.



WARNING: Installation must be carried out by a qualified engineer.

This section is provided for information purposes only and must be checked and adapted if necessary according to the actual installation conditions.

3.7 Electrical installation

To function safely and maintain the integrity of your electrical system, the unit must be connected to a general electricity supply in accordance with the following regulations:

Upstream, the general electricity supply must be protected by a 30 mA differential switch.

The heat pump must be connected to a suitable D-curve circuit breaker (see table below) in accordance with current standards and regulations in the country where the system is installed.

The electricity supply cable must be adapted to match the unit's rated power and the length of wiring required by the installation (see table below). The cable must be suitable for outdoor use.

For a three-phase system, it is essential to connect the phases in the correct sequence. If the phases are inverted, the heat pump's compressor will not work.

In places open to the public, it is mandatory to install an emergency stop button close to the heat pump.

Models		Electricity supply	Max. current	Cable diameter	Protection Thermal-magnetic(D curve) Protection
Pool Inverter	70/90	Monophase 220~240V/1N~50Hz	9.76	RO2V 3×2.5 mm ²	16A
	120		12.42		16A
	150/200		15.53		20A

Cable cross section suitable for max. length 10 meters. For longer than 10 meters, consult an electrician.

3.8 Electrical connection


⚠ WARNING: The heat pump's power supply **MUST** be disconnected before any operation.

Please comply with the following instructions to electrically connect the heat pump.

Step 1: Detach the electrical side panel with a screwdriver to access the electrical terminal block.

Step 2: Insert the cable into the heat pump unit by passing it through the opening provided for that purpose.

Step 3: Connect the power supply cable to the terminal block in accordance with the diagram below.

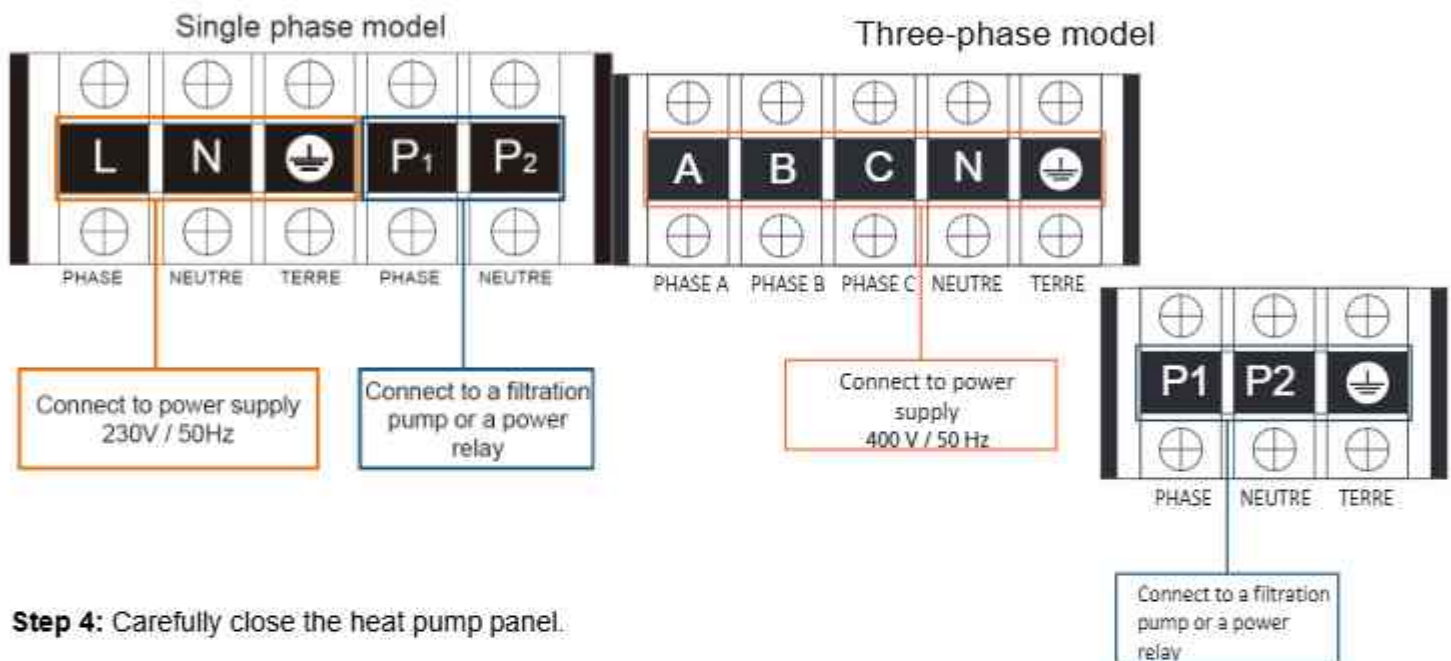

Step 4: Carefully close the heat pump panel.

Servo-control of circulating pump

Depending on the type of installation, you can also connect a circulating pump to terminals P₁ and P₂ so that this operates in tandem with the heat pump.

⚠ WARNING: Servo-control of a pump whose power exceeds 5A (1000W) requires the use of a power relay.

3.9 Wall-mounting the remote control

Step 1: Detach the remote control from the machine. Pay attention to the communication wire connected to the printed circuit board and separate them carefully.


Step 2: Use a screwdriver to open the casing and separate the remote control.

Step 3: Drill two parallel holes at eye level: 60 mm centre-to-centre.

Step 4: Attach the remote control's rear cover to the wall.

Step 5: Align the front and rear covers exactly, ensuring that the box is fixed firmly to the wall.

Step 6: Carefully connect the communication wire.

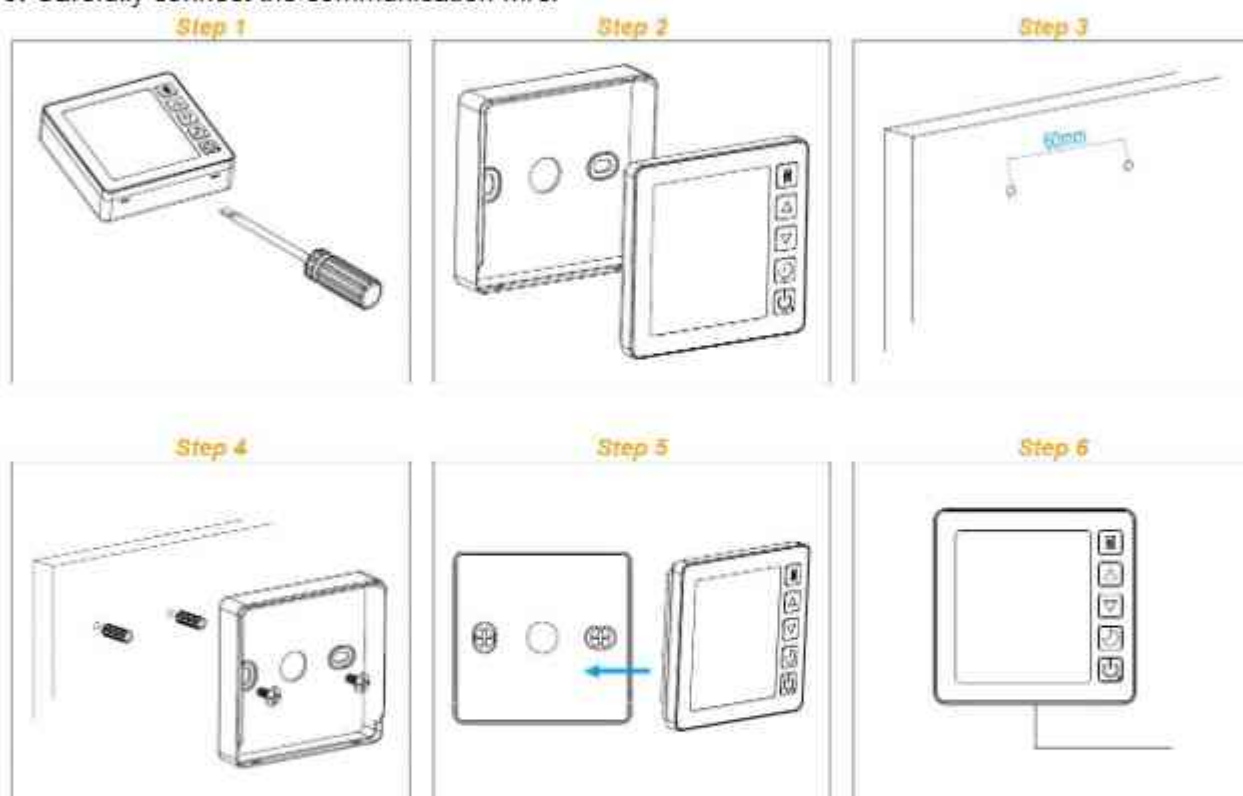

WARNING: Do not use sharp objects to touch the remote control's front face and buttons as you may damage it. When the remote control is fixed to the wall, do not pull the communication wire, this may cause a loose contact.

4. Use

4.1 Wired remote control



The factory default screen extinguishing function, three minutes no operation screen off, press any key to restore the display.

4.2 Operating mode selector

⚠ Before starting, ensure that the filtration pump is working and that water is circulating through the heat pump.

Prior to setting your required temperature, you must first select an operating mode for your heat pump:



Heating Mode (Inverter)

Select the heating mode for the heating pump to heat the water in your pool intelligently



Fix Mode (Heating only)

Select the fix heating mode for the heat pump to heat the water in your pool constant power.



ECO Silence Mode

Select the silence heating mode for the heat pump to heat the water at reduced speed.



Cooling Mode (Inverter)

Select the cooling mode for the heat pump to cool the water in your pool intelligently.

4.3 Heating Mode (Inverter)

⚠ WARNING: Before starting, ensure that the filtration pump is operating correctly.

Step 1: Long press  3s to switch on your pump.

Step 2: Long press  3s to switch from one mode to another until the Heating Mode is displayed.


Step 3: Using buttons  and  select the required temperature (15–40°C).

EXAMPLE:

If you have selected 28°C, your screen will display:



Once the symbol  stops blinking, the required temperature is validated and is replaced by the water's current temperature (25° in our example).

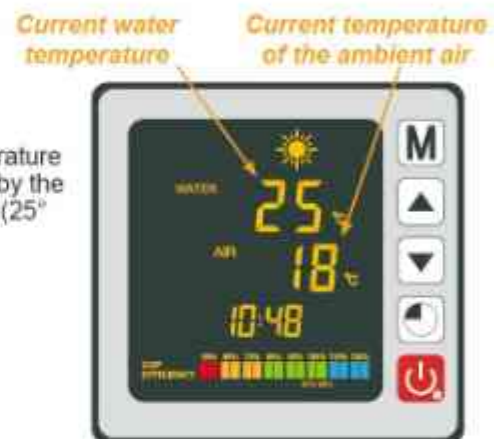

Useful information:

⚠ WARNING: When the cooling mode switches to heating mode or vice-versa, the heat pump will restart after 10 minutes.

When the incoming water temperature is less than or equal to the required temperature (setpoint temperature - 1°C), the heat pump will switch to heating mode. The compressor will stop when the temperature of the incoming water is greater than or equal to the required temperature (setpoint temperature + 1°C).

4.4 Fix Mode (heating only)

⚠ WARNING: Before starting, ensure that the filtration pump is operating correctly.

Step 1: Long press  3s to switch on your pump.

Step 2: Long press  3s to switch from one mode to another until the Heating Mode is displayed.


Step 3: Using buttons  and  select the required temperature (15-40°C).

EXAMPLE:

If you have selected 28°C, your screen will display:



Once the symbol  stops blinking, the required temperature is validated and is replaced by the water's current temperature (25° in our example).

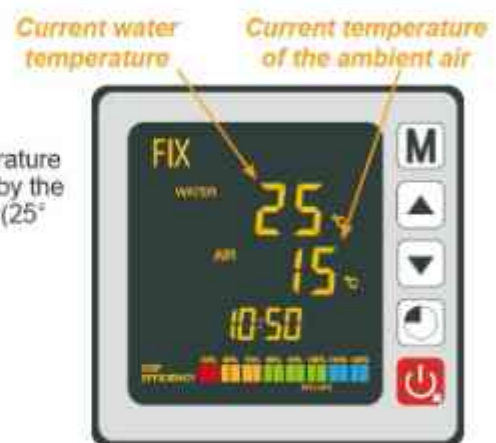

Useful information:

⚠ WARNING: When the cooling mode switches to heating mode or vice-versa, the heat pump will restart after 10 minutes.

When the incoming water temperature is less than or equal to the required temperature (setpoint temperature - 1°C), the heat pump will switch to heating mode. The compressor will stop when the temperature of the incoming water is greater than or equal to the required temperature (setpoint temperature + 1°C).

4.5 ECO Silence Mode

⚠ WARNING: Before starting, ensure that the filtration pump is operating correctly.

Step 1: Long press  3s to switch on your pump.

Step 2: Long press  3s to switch from one mode to another until ECO Heating Mode is displayed.


Step 3: Select the desired temperature by using the buttons  and  (15-40°C).

EXAMPLE:

If you have selected 28°C, your screen will display:



Once the symbol **SET** stops blinking, the required temperature is validated and is replaced by the water's current temperature (25° in our example).

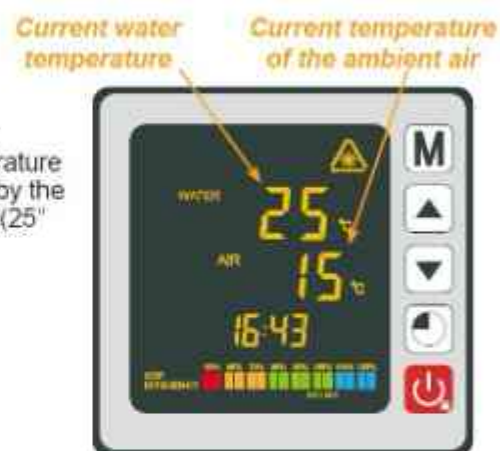

Useful information:

⚠ WARNING: When the cooling mode switches to heating mode or vice-versa, the heat pump will restart after 10 minutes.

When the incoming water temperature is less than or equal to the required temperature (setpoint temperature - 1°C), the heat pump will switch to heating mode. The compressor will stop when the temperature of the incoming water is greater than or equal to the required temperature (setpoint temperature + 1°C).

4.6 Cooling Mode (Inverter)

⚠ WARNING: Before starting, ensure that the filtration pump is operating correctly.

Step 1: Long press  3s to switch on your pump.

Step 2: Long press  3s to switch from one mode to another until the Heating Mode is displayed.


Step 3: Using buttons  and  select the required temperature (15-40°C).

EXAMPLE:

If you have selected 24°C, your screen will display:



Once the symbol **SET** stops blinking, the required temperature is validated and is replaced by the water's current temperature (27° in our example).

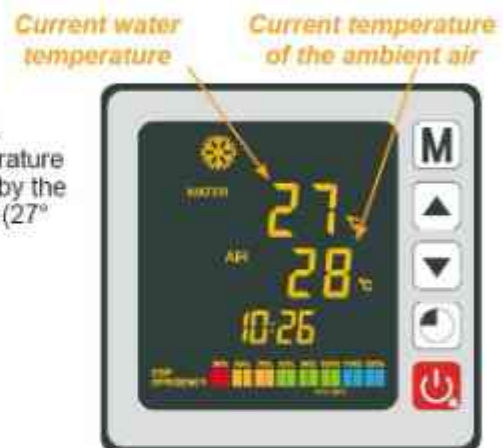

Useful information:

⚠ WARNING: When the cooling mode switches to heating mode or vice-versa, the heat pump will restart after 10 minutes.

When the incoming water temperature is less than or equal to the required temperature (setpoint temperature - 1°C), the heat pump will switch to heating mode. The compressor will stop when the temperature of the incoming water is greater than or equal to the required temperature (setpoint temperature - 1°C).

4.7 Setting the clock

Set the system clock to local time, as follows:


Step 1: Press  to set the time, the hours are blinking.

Step 2: Adjust the hours with the buttons  and .

Step 3: Press  to switch the minutes.

Step 4: Adjust the minutes with the buttons  and .

Step 5: Press  to validate and return to the main screen.

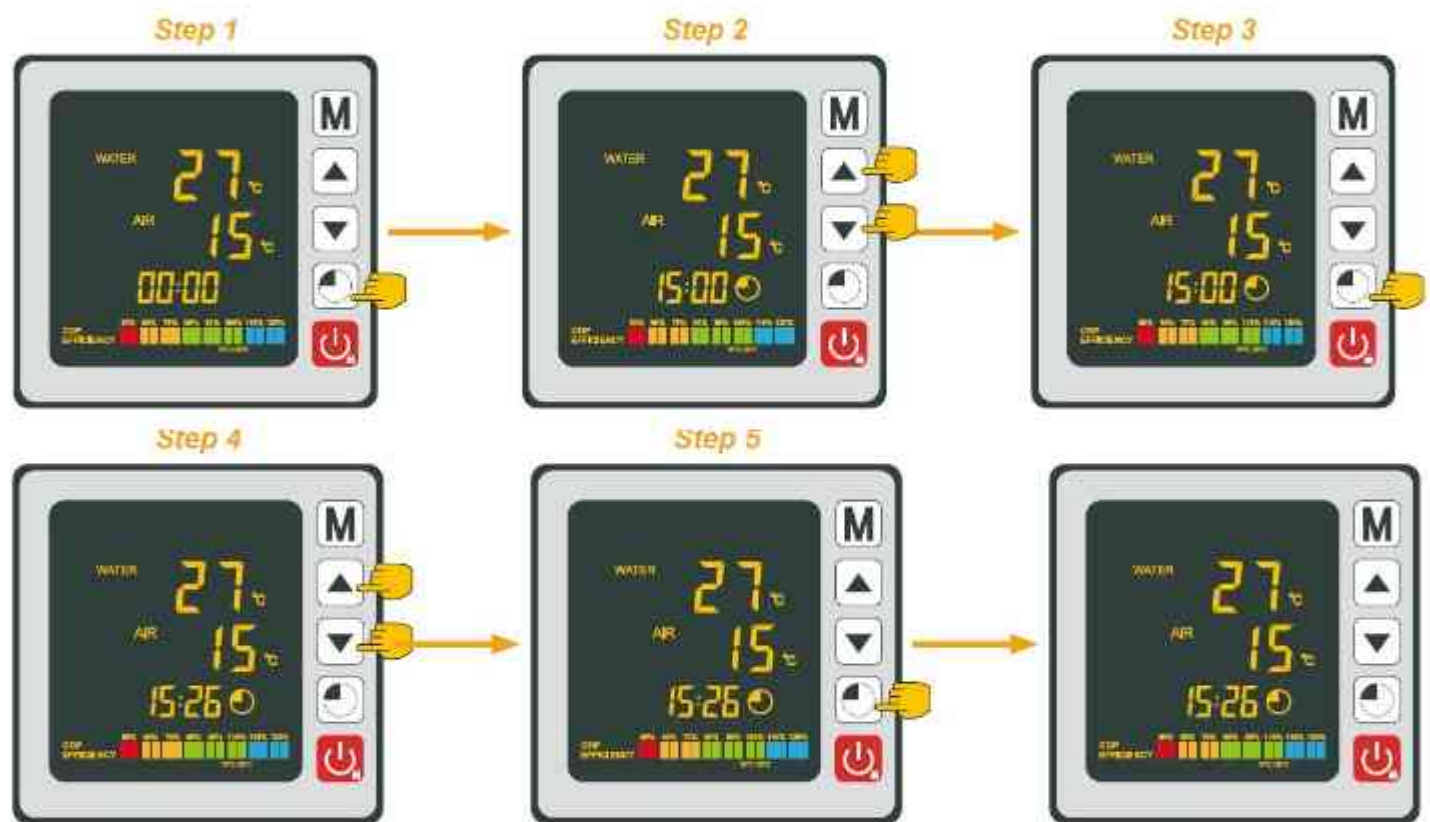

4.8 Programming start/stop

This function is for programming the Start/Stop timing. You can programme up to 3 different Start/Stop timings. Setting is as follows:

Step 1: Long press  3s to enter into timer functions

Step 2: Select the programme to be configured with the buttons  and .

Step 3: Press  to programme the start time.

Step 4: Adjust the hours with the buttons  and .

Step 5: Press  to switch to minutes.

Step 6: Adjust the minutes with the buttons  and .

Step 7: Press  to programme the stop time.

Step 8: Adjust the hours with the buttons  and .


Step 9: Press  to switch to minutes.

Step 10: Adjust the minutes with the buttons  and .

Step 11: Press  to return to the main screen.

NB: The remote control returns automatically to the main screen after 10 seconds.

Refer to the following section to activate the programme

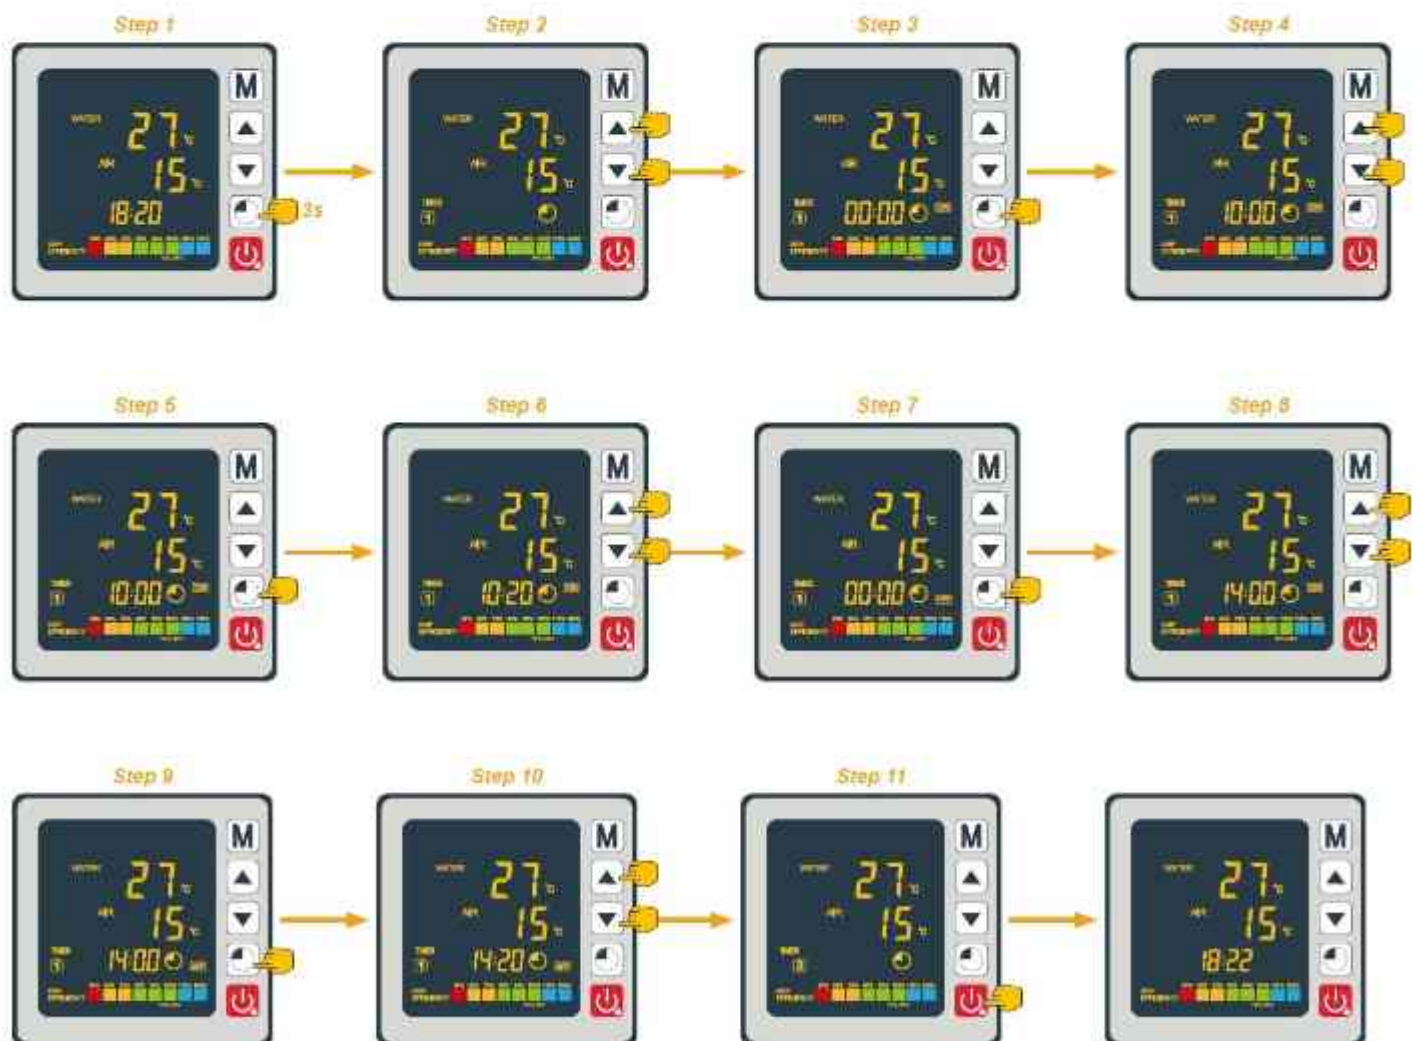

4.9 Activating a programme

Once the programme has been defined, it can be activated as follows:


Step 1: Long press  3s to enter into timer functions

Step 2: Select the programme to be activated with the buttons  and .

Step 3: Keep pressing  until the ON/OFF indicator lights are displayed and start flashing.

Step 4: Press  to return to the main screen.

The ON/OFF lights indicate an active programme; the numeral above the line indicates the number of the active programme.

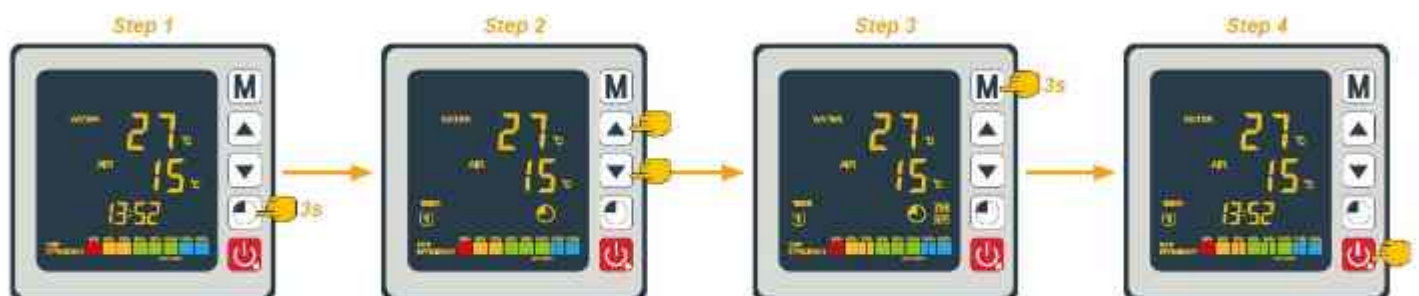

4.10 Deactivating a programme

Once the programme has been activated, it can be deactivated as follows:


Step 1: Long press  3s to enter into timer functions

Step 2: Select the programme to be deactivated with the buttons  and .

Step 2: Keep pressing  until the ON/OFF indicator lights disappear

Step 3: Press  to return to the main screen

The ON/OFF lights indicate an active programme; the numeral above the line indicates the number of the active programme.

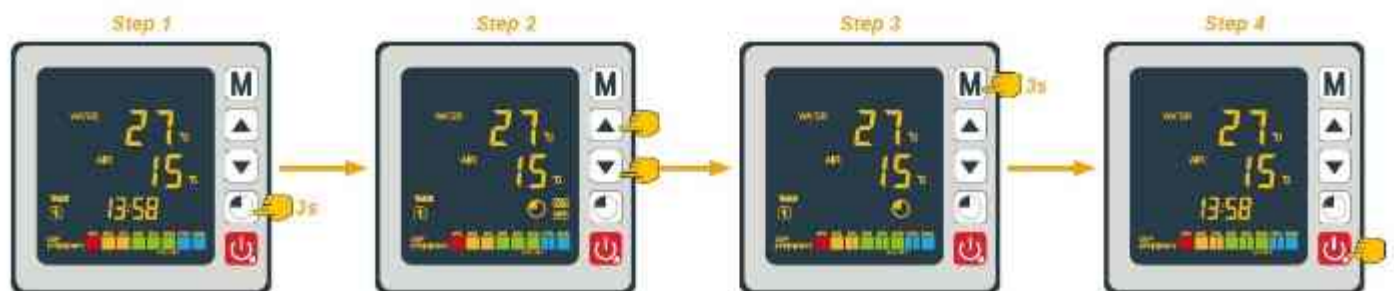

4.11 Status values

The status values can be checked via the remote control by following these steps.

Step 1: Keep pressing  until you enter the settings verification mode.

Step 2: Press  and  to check the status values.

Step 3: Press  to return to the main screen.



Status values table

Code	Description
01	Water inlet temperature (-30~99°C)
02	Water outlet temperature (-30~99°C)
03	Ambient temperature (-30~99°C)
04	Discharge gas temperature (0~125°C)
05	Suction gas temperature (-30~99°C)
06	Outside coil temperature (-30~99°C)
07	Inside coil temperature (-30~99°C)
08	The openness of the expansion valve
09	Reserved
A	Compressor current (A)
B	PCB temperature (°C)
C	Fan motor current (A)
D	Compressor real frequency (Hz)
E	Main PCB current (A)
F	Fan motor speed (RPM)

4.12 System parameter query

⚠ WARNING: This operation is used to assist servicing and future repairs.
The default settings should only be modified by an experienced professional person.

⚠ WARNING: Any change to the reserved settings will automatically void the warranty.

The system's settings can be checked and adjusted via the remote control by following these steps:

Step 1: Keep pressing 3s on until you enter the settings verification mode.

Step 2: Press and for see the configured parameters.


Step 3: Press to select the setting to be modified, the value is blinking.

Step 4: Press and to adjust the setting value.

Step 5: Press to set the new value.

Step 6: Press to return to the main screen.

If not 26operation for 60s, it will be exited automatically.

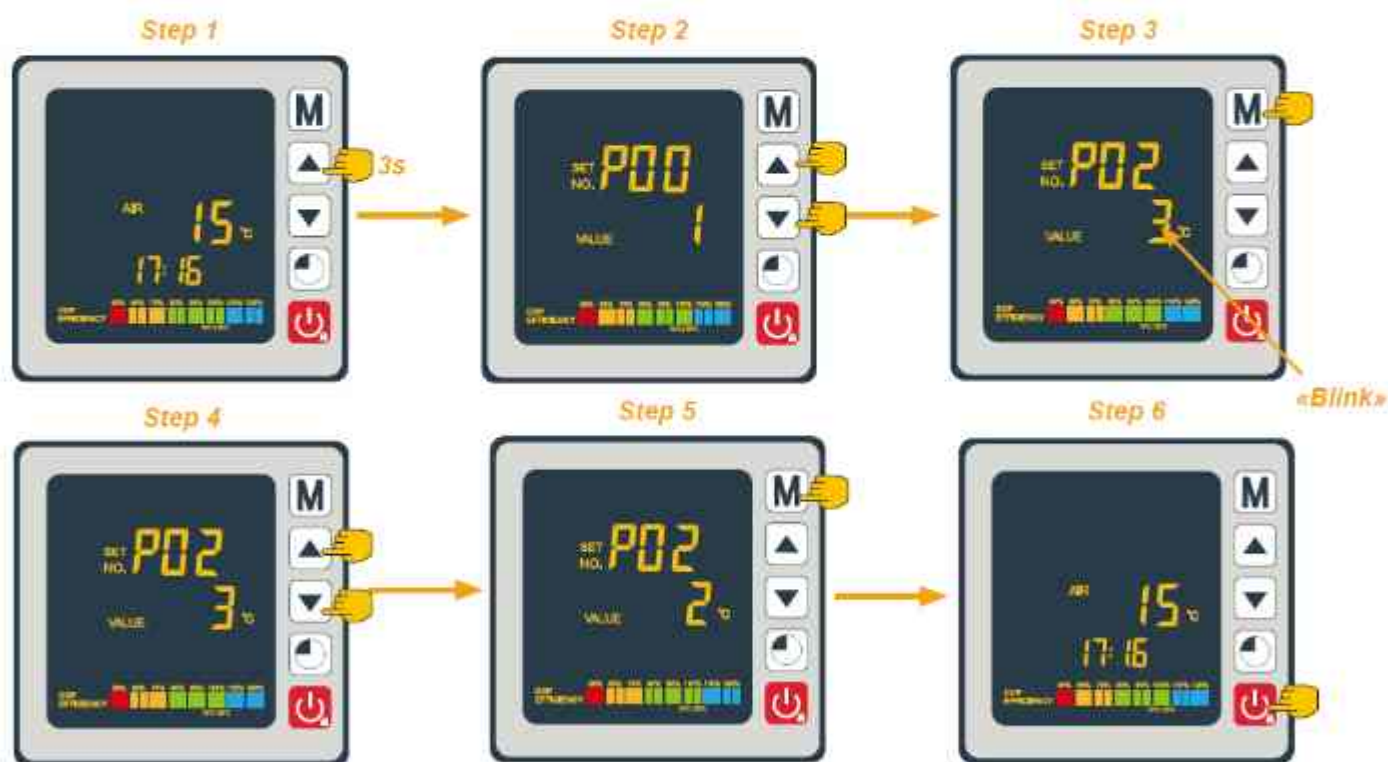

4.13 Forced de-icing function

Long press and 3 seconds to enter forced de-icing.

4.14 Parameter table

Code	Description	Range	Default value
P01	Adjustment of temperature difference before restart	1°C~18°C	1°C
P02	Reserved	—	—
P03	Reserved	—	—
P04	Adjusting the cooling temperature	8°C~28°C	27°C
P05	Adjusting the heating temperature	15°C~40°C	27°C
P06	Discharge temperature too high protection	80°C~125°C	105°C
P07	Discharge temperature too high Reset temperature	50°C~100°C	90°C
P08	Compressor current protection	2A~50A	Reserved
P09	Setting the compensation coefficient of the temperature water inlet	-5°C~15°C	0°C
P10	Reserved	—	—
P11	Auto-activation time before de-icing commences	20MIN~90MIN	45MIN
P12	De-icing activation temperature	-15°C~1°C	-3°C
P13	Maximum de-icing duration	5MIN~20MIN	8MIN
P14	De-icing deactivation temperature	1°C~40°C	20°C
P15	Temperature difference between ambient temperature and coil temperature during defrosting	0°C~15°C	2°C
P16	Defrosting ambient temperature	0°C~20°C	17°C
P17	Expansive valve action period	20S~90S	45S
P18	Target overheat temperature during heating	-5°C~10°C	2°C
P19	EXV adjust the discharge temperature	70°C~125°C	95°C
P20	The openness of EXV	20~450	300
P21	The mini opening for the electrical expansive valve	50~150	70
P22	EXV working way	0=Annual / 1=Auto	1
P23	EXV annual step	20~450	350
P24	Target overheat temperature during cooling	-5°C~10°C	1°C
P25	Water pump offtime after reaching setting temperature	1-99MIN	45
P26	Water pump working time after reaching setting temperature	0-99MIN	5
P27	EXV working way during cooling	0=Ambient / 1=Overheat temperature	1
P28	Filtration pump servo-control mode	0=Stop / 1=Working	1

*** Parameter 01 allows you to change the lost degree interval from the requested temperature so that the heat pump starts again.**

Example: If the value of parameter 01 is 1°C, after reaching the required temperature (eg 27°C), the heat pump will restart when the pool temperature drops to 26°C (27 - 1).

**** Parameter 28: Control mode of the circulation pump**

When you switch on your heat pump, the circulation pump starts and then 1 minute later, the heat pump compressor is activated. When the heat pump stops running, its compressor and fan shut off, and after 30 seconds, the circulation pump stops. During a defrost cycle, the circulation pump will continue to operate regardless of the mode chosen.

5. Operation

5.1 Operation

Conditions of use

For the heat pump to operate normally, the ambient air temperature must be between -5°C and 43°C.

Recommendations prior to start-up

Before activating the heat pump, please:

- ✓ Check that the unit is firmly secured and stable.
- ✓ Check that the gauge indicates a pressure greater than 80 psi.
- ✓ Check that the electrical wiring is properly connected to the terminals.
- ✓ Check the earthing.
- ✓ Check that the hydraulic connections are tight and that there is no leakage of water.
- ✓ Check that the water is circulating correctly in the heat pump and that the flow rate is adequate.
- ✓ Remove any unnecessary object or tool from around the unit.

Operation

1. Activate the unit's power supply protection (differential switch and circuit-breaker).
2. Activate the circulating pump if it is not servo-controlled.
3. Check the By-Pass opening and the control valves.
4. Activate the heat pump by pressing once on .
5. Adjust the remote control clock (Section 4.6)
6. Select the required temperature by using one of the remote control's modes (Section 4.2)
7. The heat pump's compressor will start up after a few moments.

All you have to do now is wait until the required temperature is reached.

WARNING: Under normal conditions, a suitable heat pump can heat the water in a swimming pool by 1°C to 2°C per day. It is therefore quite normal to not feel any temperature difference in the system when the heat pump is working.

A heated pool must be covered to avoid any loss of heat.

5.2 Servo-control of circulating pump

If you have connected a circulating pump to terminals P1 and P2, it is automatically electrically powered when the heat pump operates.

When the heat pump is on standby, the circulating pump is powered intermittently in order to monitor the water temperature in the pool.

Servo-control mode for circulating pump (Setting 10)

When you activate your heat pump, the circulating pump starts up, followed 1 minute later by the heat pump compressor. When the heat pump stops working, its compressor and fan shut down, and the circulating pump stops after 30 seconds. During a de-icing cycle, the circulating pump will continue to operate irrespective of the selected mode.

Mode 0: This mode has been designed to maintain filtration in your pool without using the timetable programmer. When the required temperature is reached, the heat pump will go on standby, then 30 seconds later the circulating pump will shut down. The circulating pump will then be reactivated in special mode: 5 minutes operation, 45 minutes shut down, thus maintaining regular filtering of your pool.

Model 1 (default): By selecting this mode, the heat pump will automatically put the circulating pump into continuous operation. Once the circulating pump is operating, the heat pump will start up 1 minute later. Next, when the required temperature is reached, the heat pump will stop working but will not stop the circulating pump, so as to ensure a constant circulation of water in your heat pump.

A temperature sensor, being placed in the exchanger compartment, this mode allows your heat pump to update the actual temperature of your pool. This mode is therefore recommended.

5.3 Using the pressure gauge

The gauge is for monitoring the pressure of the refrigerant contained in the heat pump.

The values it indicates can vary considerably, depending on the climate, temperature and atmospheric pressure.

When the heat pump is in operation:

The gauge's needle indicates the refrigerant pressure.

Mean operating range between 138 and 275 PSI, depending on the ambient temperature and atmospheric pressure.

When the heat pump is shut down:

The needle indicates the same value as the ambient temperature (within a few degrees) and the corresponding atmospheric pressure (between 51 and 210 PSI maximum).

If left unused for a long period of time:

Check the pressure gauge before starting up the heat pump. It must indicate at least 137 PSI.

If the pressure goes down too much, the heat pump will display an error message and automatically go into 'safe' mode.

This means that there has been a leakage of refrigerant and that you must call a qualified technician to replace it.

5.4 Antifreeze protection



WARNING: For the antifreeze system to work, the heat pump must be powered and the circulating pump activated. If the circulating pump is servo-controlled by the heat pump, it will be automatically activated.

When the heat pump is on standby, the system monitors the ambient temperature and the water temperature in order to activate the antifreeze programme if required.

The antifreeze programme is automatically activated when the ambient temperature or the temperature of the water is less than 2°C and when the heat pump has been shut down for more than 120 minutes.

When the antifreeze programme is running, the heat pump activates its compressor and the circulating pump so as to reheat the water until the water temperature exceeds 2°C.

The heat pump automatically leaves the antifreeze mode when the ambient temperature is greater than or equal to 2°C or when the heat pump is activated by the user.

6. Maintenance and servicing

6.1 Maintenance and servicing



WARNING: Before undertaking maintenance work on the unit, ensure that you have disconnected the electrical power supply.

Cleaning

The heat pump's casing must be cleaned with a damp cloth. The use of detergents or other household products could damage the surface of the casing and affect its properties.

The evaporator at the rear of the heat pump must be carefully cleaned with a vacuum cleaner and soft brush attachment.

Annual maintenance

The following operations must be undertaken by a qualified person at least once a year:

- ✓ Carry out safety checks.
- ✓ Check the integrity of the electrical wiring.
- ✓ Check the earthing connections.
- ✓ Monitor the state of the pressure gauge and the presence of refrigerant.

6.2 Winter storage


In the winter months when the ambient temperature is lower than 3°C, a shut-down heat pump must be winterised to avoid any frost damage.

Winterising in 4 steps




Step 1

Disconnect the heat pump from the power supply.

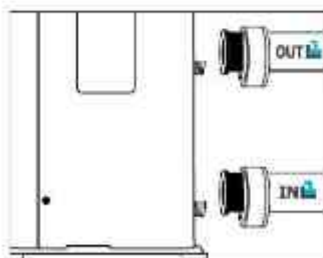


Step 3

Unscrew the drain plug and water pipes in order to drain any water from the heat pump.

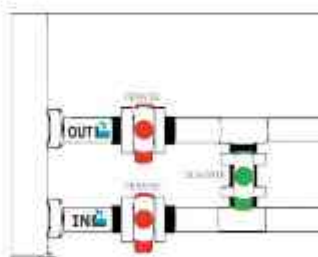

Step 2

Open the By-Pass valve. Close the inlet and outlet valves.

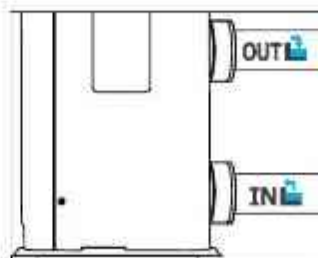

Step 4

Screw back the drain plug and pipes or block them with rags so as to prevent any foreign bodies from getting into the circuit. Finally, protect the pump with its winter storage cover.



If a circulating pump is servo-controlled by the heat pump, drain this also.

7. Repairs



WARNING: Under normal conditions, a suitable heat pump can heat the water in a swimming pool by 1°C to 2°C per day. It is therefore quite normal to not feel any temperature difference in the system when the heat pump is working.

A heated pool must be covered to avoid any loss of heat.

7.1 Breakdowns and faults

In the event of a problem, the heat pump's screen displays a fault symbol  instead of temperature indications. Please consult the table opposite to find the possible causes of a fault and the actions to be taken.

Fault code examples:

Fault code 03



Fault code 04



Fault code 21



Fault code 32



7.2 List of faults


Code	Fault	Possible causes	Action
03	Flow sensor malfunction	Insufficient water in heat exchanger	Check your water circuit operation and the opening of the By-Pass valves
		Sensor disconnected or defective	Reconnect or replace sensor
04	Antifreeze protection	Protection activated when the ambient temperature is too low and the unit is on standby	No intervention is necessary
05	High pressure protection	Insufficient water flow	Check water pump operation and openings of By-Pass inlet/outlet valves
		Excess refrigerant gas	Readjust the refrigerant volume
		Defective 4-way valve	Replace the 4-way valve
		High pressure switch disconnected or defective	Reconnect or replace high pressure switch
06	Low pressure protection	Insufficient refrigerant gas	Readjust the refrigerant volume
		Defective 4-way valve	Replace valve
		Low pressure switch disconnected or defective	Reconnect or replace low pressure switch
09	Connection problem between PCB and wired remote control	Bad connection	Check wiring connections between remote control and PCB
		Defective wired remote control	Replace remote control
		Defective PCB	Replace PCB
10	Connection problem between PCB and inverter module	Bad connection	Check wiring connections between PCB and inverter module
		Defective inverter module	Replace inverter module
		Defective PCB	Replace PCB
12	Vented air temperature too high	Insufficient refrigerant gas	Readjust the refrigerant volume
15	Water intake temperature sensor malfunction	Sensor disconnected or defective	Reconnect or replace sensor
16	Outside coil temperature error	Sensor disconnected or defective	Reconnect or replace sensor
18	Vented temperature error	Sensor disconnected or defective	Reconnect or replace sensor
20	Inverter module protection	See chapter Appendices	
21	Ambient temperature error	Sensor disconnected or defective	Reconnect or replace sensor
23	Water temperature at outlet too low for cooling mode	Insufficient water flow	Check water pump operation and openings of By-Pass inlet/outlet valves
27	Water outlet error	Sensor disconnected or defective	Reconnect or replace sensor
29	Backed temperature error	Sensor disconnected or defective	Reconnect or replace sensor
32	Outlet temperature too high for heating mode protection	Insufficient water flow	Check water pump operation and openings of By-Pass inlet/outlet valves
33	Coil temp too high (higher than 67°C) for cooling mode protection	Refrigerant overcharged	Readjust the refrigerant volume
		Fan motor doesn't work or air outlet blocked	Check the fan is working properly and the air inlet is unobstructed
35	Total Overcurrent Protection	Abnormal Supply Voltage System Blockage	Check for excessive current input and unstable voltage Check if the fins are clean and free of dust or obstructions
42	Inside coil temperature error	Sensor disconnected or defective	Reconnect or replace sensor
46	DC fan motor malfunction	Bad wire connection	Reconnect the fan
		Fan motor is defective	Replace the fan motor

Error code E20

Code	Description	Possible reason	Actions
1	IPM excessive current	IPM module failure	Replace the inverter module
2	Compressor	Compressor	Replace the compressor
4	Reserved	--	--
8	Compressor lack of phase	The wire for the compressor break/bad connection	Check the wire connection of the compressor
16	DC bus voltage too low	Input voltage too low/PFC module failure	Check input voltage/replace module
32	DC bus voltage too high	Input voltage too high/PFC module failure	Replace the inverter module
64	Temp of radiating fin too high	Fan motor failure/Air duct blockage	Check fan motor/air duct
128	Temp of radiating fan failure	Radiating fin temp sensor short circuit or open circuit failure	Replace the inverter module
257	Connection failure	Inverter module doesn't receive the command of PCB	Check the connection between the module and PCB
258	AC input lack of phase	Input lack of phase	Check the wire connection
260	AC input voltage too high	Input three-phase unbalance	Check input the 3-phase voltage
264	AC input voltage too low	Input voltage too low	Check input voltage
272	High pressure failure	Compressor pressure too high(reserved)	--
268	IPM temp too high	Fan motor failure/Air duct blockage	Check fan motor/air duct
320	Compressor current too high	The current of the compressor wiring too high/ Driver and compressor do not match	Replace the inverter module
364	PFC Module Over-temperature	PFC Module Temperature too high	Check PFC Module

8. Wiring diagram

Model: Pool Inverter 70/90/120/150/200

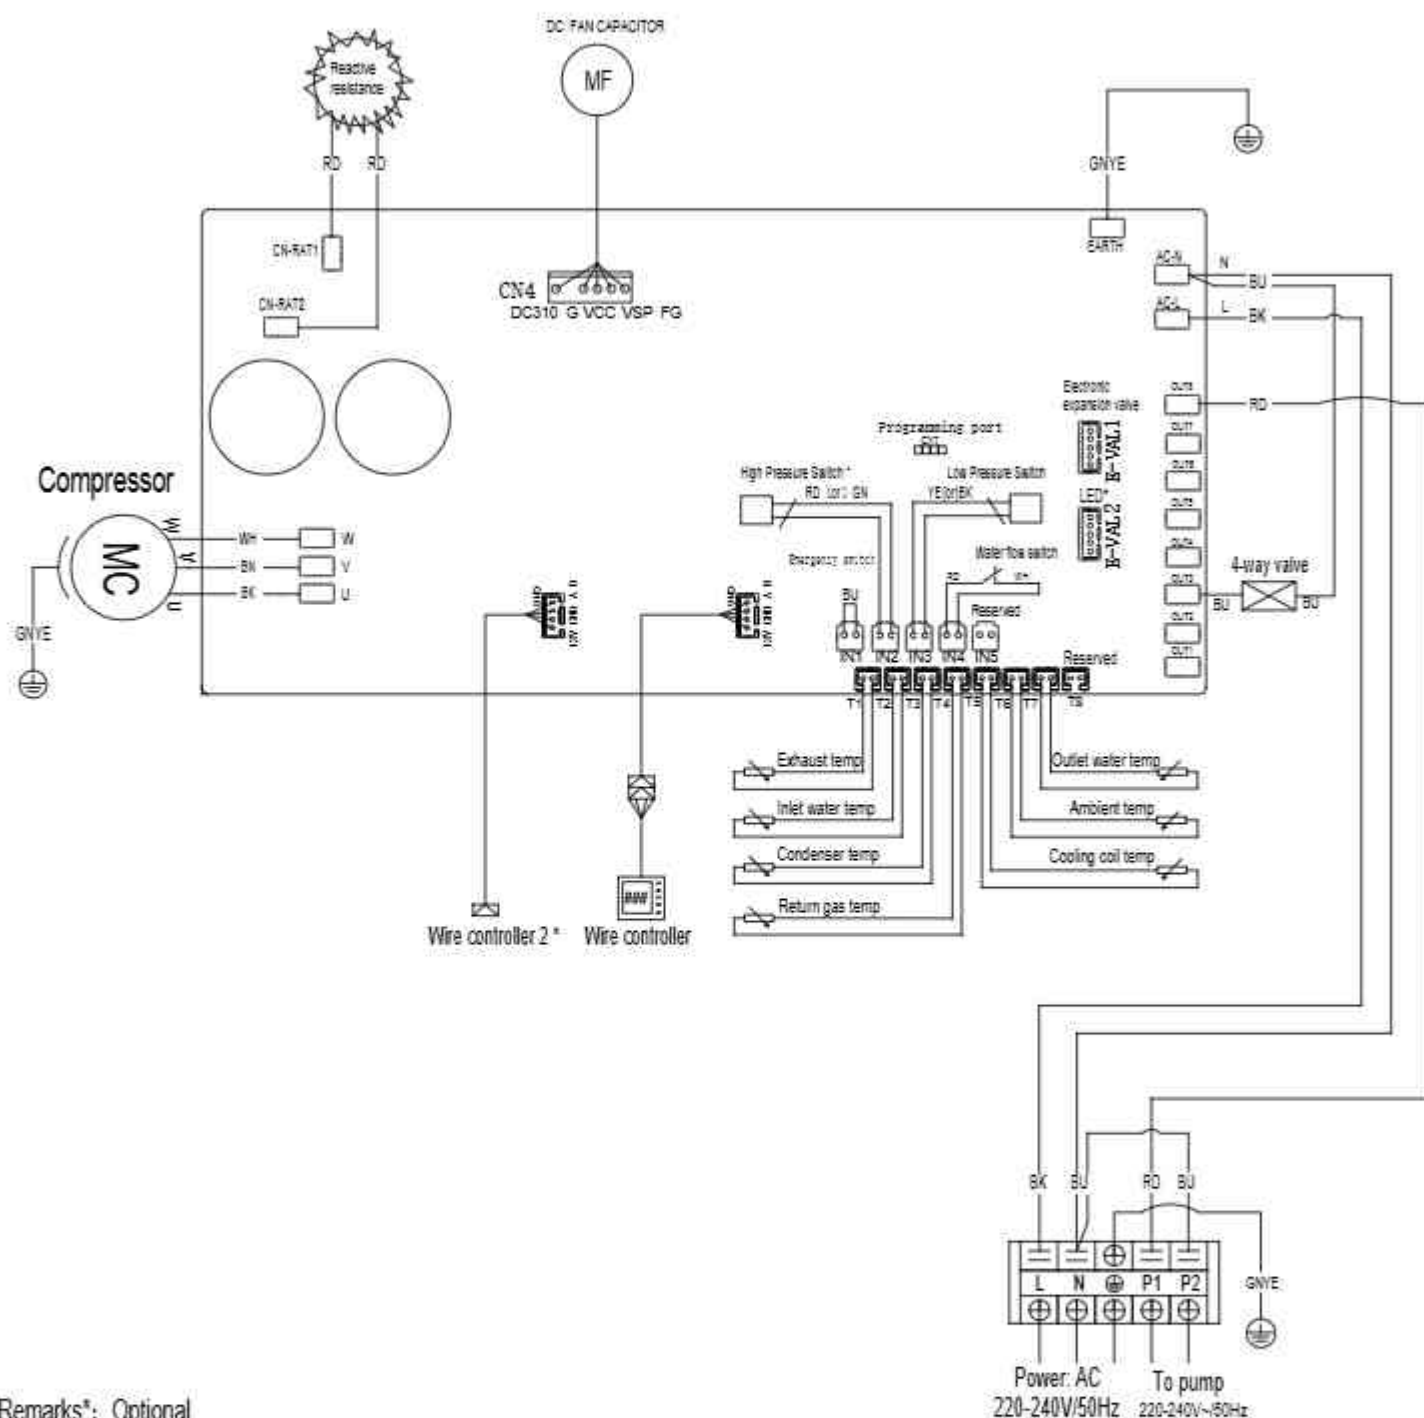

Remarks*: Optional
Electrical Diagram

